

ENCHANTED JACK-O-LANTERNS™ MIDEA

SUSPEND YOUR JACK-O-LANTERNS ANYWHERE


Enchanted Jack-O-Lanterns™ flicker and sway in the wind, creating the illusion of haunted and living jack-o-lanterns. Constructed of strong and corrosion-resistant aircraft cable for years of Halloween fun.

INSTRUCTIONS:

Required Tools: Standard Phillips Screwdriver.

Included Contents: Suspension Assembly, 2 Plastic Lid-locking Screws,
2 Metal Anchoring Screws and Plastic Suspension Tie.

- STEP 1: Carve your jack-o-lantern, melon, or synthetic jack-o-lantern.
- STEP 2: Punch or cut a small hole (approx. 1/4" in diameter) in the bottom center of the pumpkin. Punch or cut a second hole through the lid, near to the stem, as shown. Use a carving tool, screwdriver or 1/4" drill to create the holes.
- STEP 3: Thread **suspension cable assembly** through the bottom hole and pull it out through the second hole in the pumpkin lid. Replace the pumpkin lid.
- STEP 4: Install **lid-locking screws**. Screw each of the two white plastic lid-locking screws directly into the lid cut on opposite sides, as shown.
- STEP 5: Use the included anchoring supplies to suspend your jack-o-lantern.
- Install the **metal anchoring screw** into solid wood materials only.
 - Use the **plastic suspension tie** to suspend your jack-o-lantern when a solid wood location is unavailable.

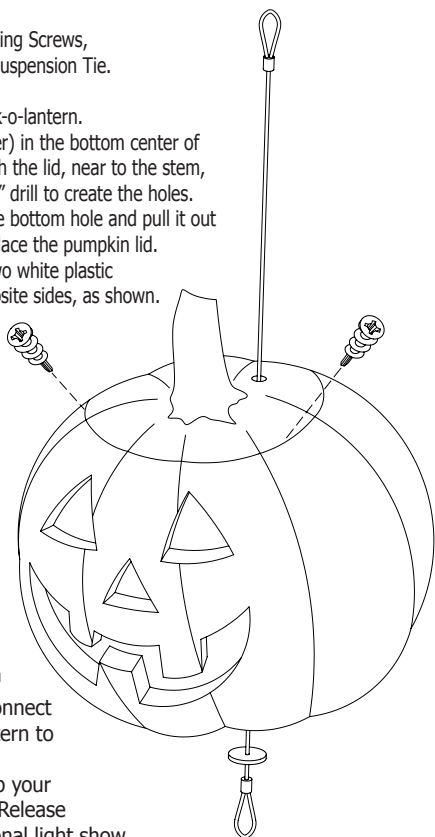

TIPS: Try suspending your jack-o-lanterns from eaves, walkways, thresholds, roofs, trees, trellises, plant-hangers, near windows, or other locations.

- Create jack-o-lantern chains by connecting more than one **Enchanted Jack-O-Lanterns™** together. Use the **plastic suspension tie** to connect the bottom cable loop of the topmost jack-o-lantern to the upper cable loop of the lower jack-o-lantern.
- Create **3-D Motion Lanterns™**. Gently wind up your jack-o-lantern (no more than 10 full rotations). Release your jack-o-lantern and watch an exciting rotational light show.
- **Enchanted Jack-O-Lanterns™** works on melons and synthetic jack-o-lanterns too.
- Note: your jack-o-lantern may tilt slightly depending on the location of the lid hole.
- Check out www.enchantedjackolanterns.com for other fun Halloween decorating ideas.

CAUTION: This product is not a toy. Not intended for use by children. Adult supervision is suggested for all users. User assumes all risk of injury. Never use open flame near flammable materials. Do not suspend directly overhead. Do not suspend jack-o-lanterns for more than a few days.

Made in USA.

Copyright © 2009 Midea Development, LLC All Rights Reserved

U.S. Patent No. 7,523,910

Other Patents Pending

www.enchantedjackolanterns.com

